



# DECK WASH



**DECK WASH** is a high quality cleaner specially designed for cedar wood decks and other exposed wood surfaces. Quickly loosens and removes mold and mildew without damage to the surface.

**DECK WASH** will degrease cooking greases.

**DIRECTIONS FOR USE:** For best results mix up to 3 parts hot water with 1 part **DECK WASH** and apply with a low pressure sprayer. Allow this mixture to penetrate on wood for 5-10 minutes and rinse thoroughly with a pressure washer.

## TECHNICAL INFORMATION

**Color:** Colorless

**Appearance:** Clear Liquid

**Odor:** Characteristic

**pH:** <3

**Contains Oxalic Acid**

Keep out of reach of children. Do not handle until all safety precautions have been read and understood. Use eye, face, and rubber glove protection when handling these contents. Do not store at temperatures above 120°F. Do not allow to freeze.